

AIR COOLER

USER'S MANUAL





LW-WC-DC-20L



LW-WC-DC-40L

Product description

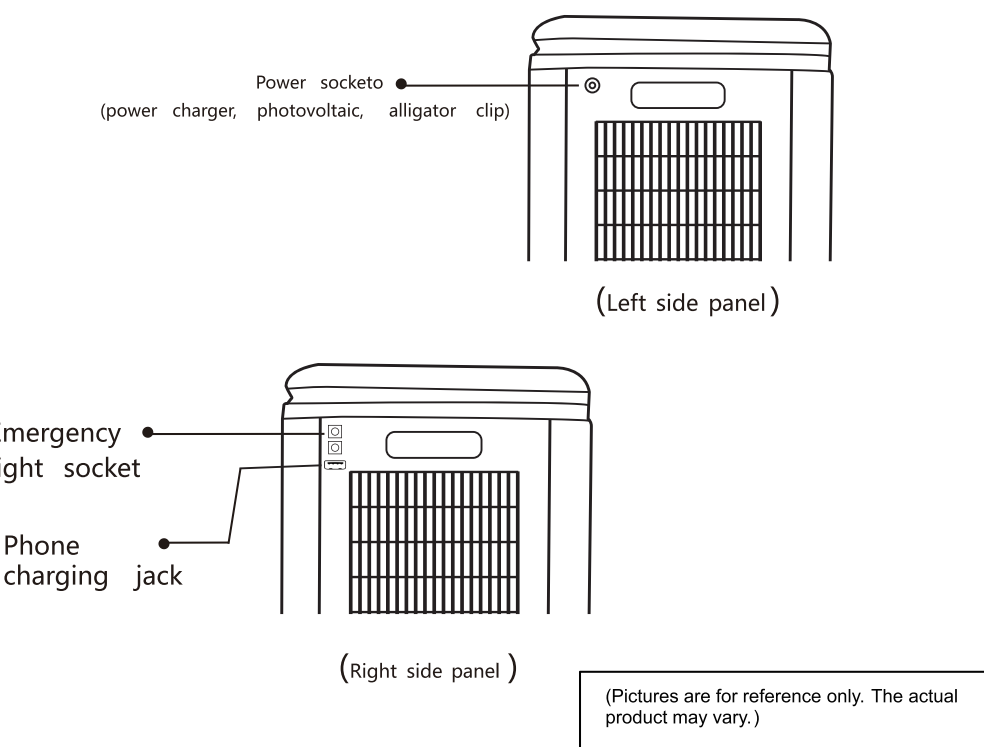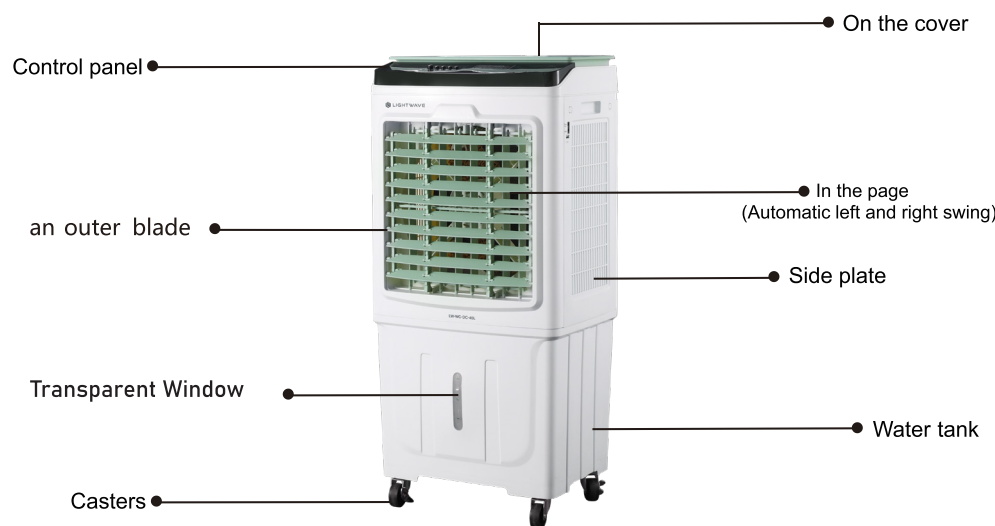

Specification parameters

Model	rated voltage	Rated power	Water tank capacity
LW-WC-DC-20L	12V DC	30W	20L
LW-WC-DC-40L	12V DC	30W	40L

(Note: Due to the difference in the top graphics, refer to the internal control code on the nameplate.)


Random Item Details

Attachment:

Serial number	1	2	3	4	5	6	7
The name	Cold fan	Crocodile clip line	Ice crystal box	Instructions	screw	Universal casters	Break casters
The number of	1 unit	1 pcs	2 pcs	1book	17pcs	2pcs	2pcs

Note: 1. One of the 17 screws is a spare screw.2. The warranty card is on the last page.

Operation method

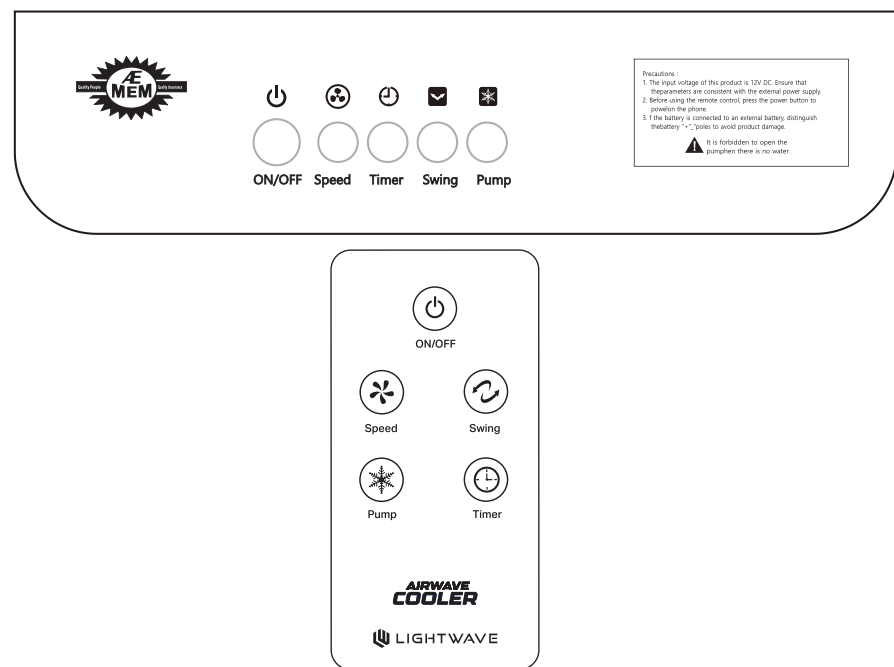

Description of keys :

- 1.Press the power button to power on the product ;
- 2.Press the speed button slightly to adjust the blowing gear. Press repeatedly to adjust 1-9 gears ;


- 3.Press the timer button to switch off the system. Press repeatedly for 0.5 to 24 hours;
- 4.Gently press the key to turn on or off automatic left and right swing ;
- 5.Press the water pump button to turn on or off the circulating water pump ;

Tips :

- 1.Before using the remote control, press the power button to power on the product ;
- 2.he product is equipped with a charging indicator. The red light indicates charging and the green light indicates charging ;

1. Caster Installation:

- Brake wheel: The brake wheel with the pedal should be installed diagonally instead of in the same direction.
- After the carton is unpacked, find out four casters and screws.
- Please install it in the bottom of the water tank and in the slot of the caster as shown in the figure.Use a Phillips screwdriver to align the accessory screws with the holes.

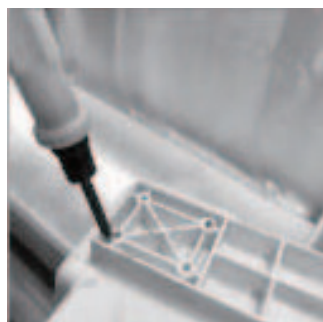

Warning

1. Do not use hot water with more than 30 °C to avoid damaging the wet curtain.
2. If there is a fault, please contact the agent or maintenance personnel, non-professionals do not disassemble.
3. Power must be disconnected from the whole unit before any maintenance can be performed.
4. Do not allow physical, sensory, or mental impairments (including children) to be exposed to incapacitated personsDo not allow children to play with the appliance unless supervised or instructed by a competent person.
5. If the power cord is damaged, it must be replaced by the manufacturer or professional technician.
6. Connect the 12 V DC power supply to avoid damage or danger.

Precautions:

1. Odor: Slightly pungent odor on first use (This is a taste of wood pulp, and the odor will disappear after 12 hours of use.)2. The machine is the principle of evaporative refrigeration, and attention is paid to ventilation when using.3. Use in a confined space will increase the humidity. Select the appropriate one.

Troubleshooting


fault	Causes / Resolutions
Fan not working	Power supply not connected correctly / Please make sure power switch is on
	Fan motor is damaged / replace motor
Pump water supply	Water pump is not on/Please confirm that water pump function is on
	The water inlet of the pump is blocked by debris or alkaline scale / Please clean the filter of the pump
	Water pump damaged / replace water pump
Page is not moving	Swing switch not open
	Swing link falling off
	Synchronous motor damaged/Replace synchronous motor
water tank drain leaking	Water drain nut loose/Retighten nut
uneven discharge of wet curtain	The ground is uneven
	Leaks blocked
Move while working	Check that the brake casters are installed diagonally
	Do the brake pads press

Use and Save

1. Use under the following conditions
 - ① Water temperature is lower than 30 °C.
 - ② Ambient temperature is between 0 and 45 °C.
 - ③ The use environment shall not have fine dust particles, so as not to affect the use effect.
2. The electrical wiring of the machine should be correctly wired and protected from being eaten by rats.
3. Please open the doors and windows before use to keep ventilation, so as not to affect the use effect.
4. Keep the side or back of the machine at least 50 cm away from other objects to maintain a good air outlet effect.

Storage Method After the End of the Season

- 1.Water tank drains, please unscrew the drain cap counterclockwiseln the rear, tilt the body to empty the water tank.
- 2.Run "high wind" independently for more than 60 minutes to dry the wet curtain.
- 3.Wipe the surface of the machine and store it in the carton.

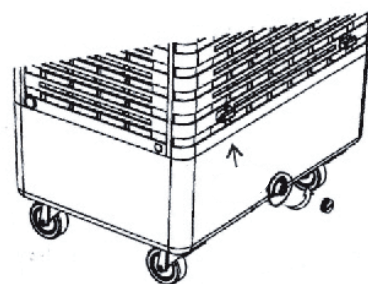

repair card

The customer	Name		Warranty period of one year
	Address		
	The phone		
	Date of purchase		

fter-sales service

Dear User
Thank you for using our products. The Company shall comply with the relevant provisions of the Consumer Protection Law. Provide you with perfect after-sales service.
1. One year free warranty for the whole machine (with the invoice and warranty card).
II. The following cases are not covered by free services
1. The user is damaged due to improper transportation, installation and use;
2. self-disassembling the product;
3. Alter the invoice or no purchase invoice and warranty card;
4. Damage due to abnormal voltage, fire or other external reasons;
5. Failing to follow the instructions, notice signs and other precautions required by the machine body;
6. For use outside normal homes (e.g. public or business use, vehicle, ship, etc.) of the environment. If you encounter difficulties in using this product, please refer to your warranty card and call your local after-sales service number.